

PEG-PUCK-EQ6R installation on a Skywatcher NEQ6-Pro mount

1. Start by unscrewing the 3 x M6 bolts and removing the stock saddle.
2. Next, place the EQ6 Saddle Powerbox adapter (SKU PEG-PUCK-EQ6R) and tighten the 3 x M6 bolts.
3. Finally, place the Saddle Powerbox (SKU PEG-SADDLEPBOX) and use the included 4 x M5 bolts.

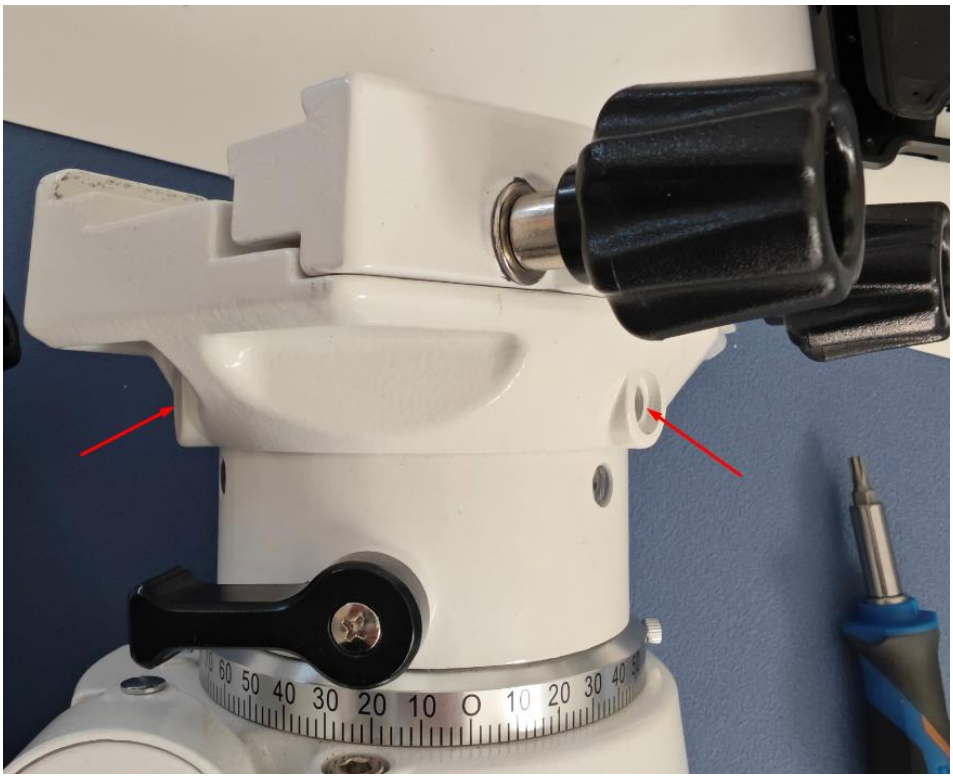

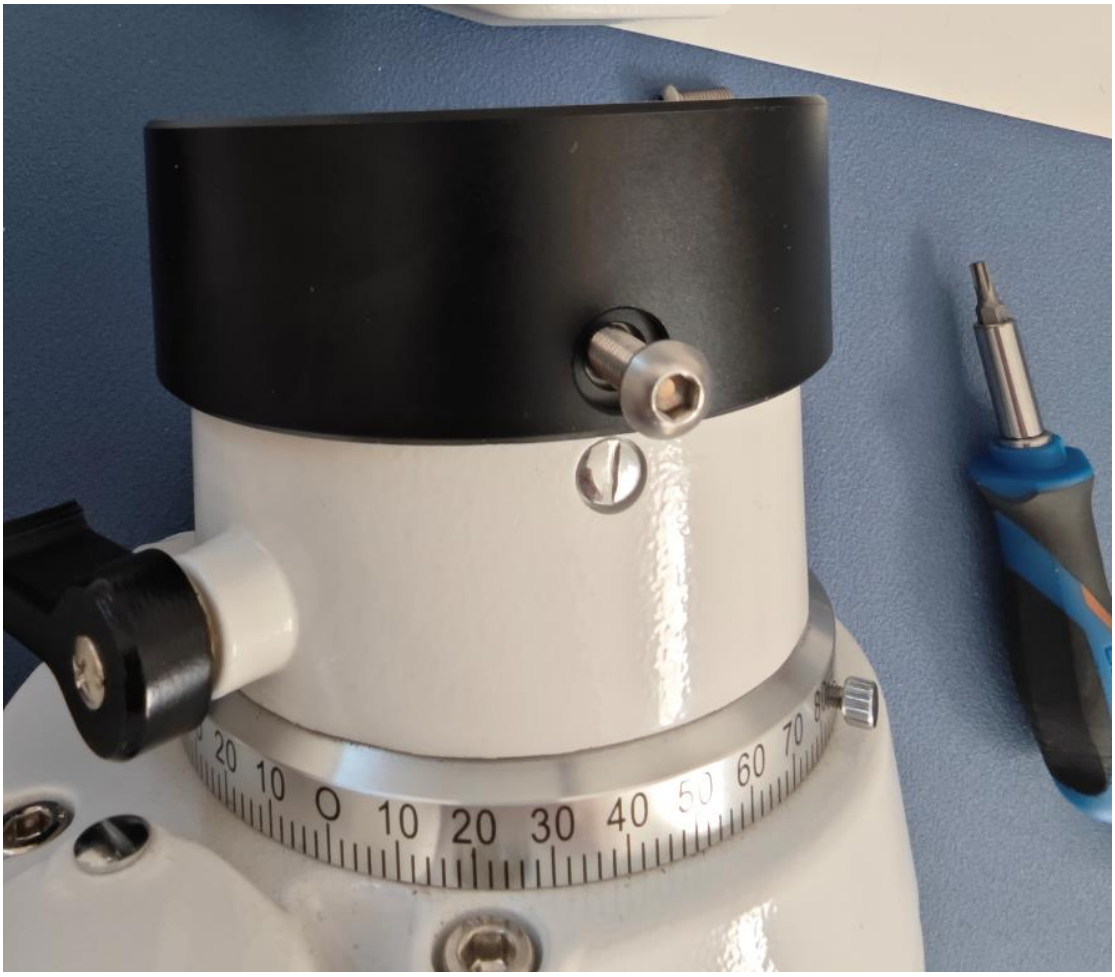


20 10 0 10 20 30 40 50 60 70

