

Attach Pegasus Astro Motor to Vixen ED81S


This telescope's focuser does not have a completely flat surface, so you need to fill this gap with some extra spacers (check photo below).

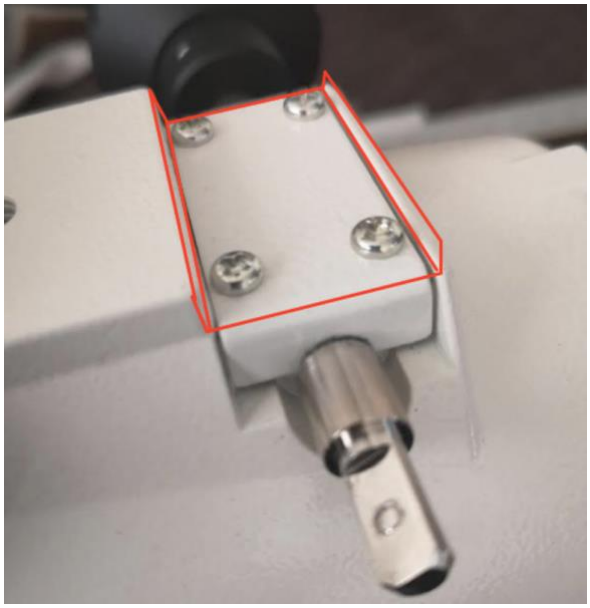

Here is an example of a similar case that shows what you have to do

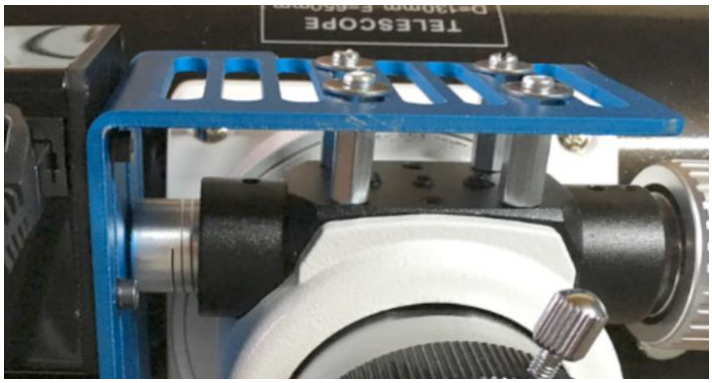

After that you need to remove at least 2 side screws and replace them with longer.
Now you can attach the bracket and tight down all the parts together.

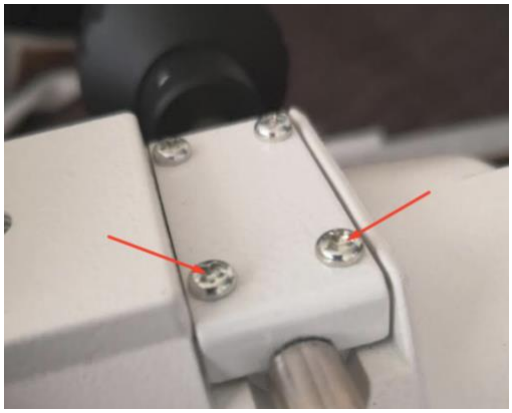

Another alternative option is to place a longer dovetail underneath the focuser and attach the bracket on it with bolts, spacers and nuts.

Here is the implementation of this approach:

